

Ship March 04

Work Order ID 140688

140688

Page 1

Item ID: D350-607-541

Accept

N900040100

Setup Start *NS1*

Revision ID:

Item Name: Quick Release Heli-Utility-Basket™ Long, HD Lid, Spacepod™/Squirrel Cheek Comp.

Stop *NS2*

Start Date: 1/13/2016 Start Qty: 1.00 *1*

Cust Item ID:

Required Date: 2/10/2016 Req'd Qty: 1.00 *1*

Customer:

Reference:

Approvals: Process Plan: SH Date: 0160113 Pooling: _____ Date: _____
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start *NR1*
Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr
D350-607-3	D
DSI9699	A

DAS
6
9-89

100	Document Control	0.00							
100	DOCUMENT CONTROL								
DC	Memo	0.00							
Doc.Control -USB or Paperwork	Photocopy bluefile & type labels per PPP D350-607-541 CHG007								

DAS
27
9-89

FEB 23 2016

110	Pick Kit	0.00							
-----	----------	------	--	--	--	--	--	--	--

110									
Packaging	Memo	0.01							
Packaging									

DAS
6
9-89

FEB 22 2016

DAS
28
9-89

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval Completed By _____ Lead hand / Supervisor Approval Verification _____ QC / QA Coordinator Approval _____		
Description Work Order Deviation				Disposition					
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐							
		OTHER : ☐							

Work Order ID 140688

January 13, 2016 3:20:58 PM

140688

Page 1

Item ID: D350-607-541

Accept

N900040100Setup Start ***NS1***

Revision ID:

Item Name: Quick Release Heli-Utility-Basket™ Long, HD Lid, Spacepod™/Squirrel Cheek Comp.

Stop ***NS2***

Start Date: 1/13/2016 Start Qty: 1.00

1

Cust Item ID:

Required Date: 2/10/2016 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
120	QC4- 100% Inspect kits for completeness	0.00							
120									
QC	Memo	0.00							
Quality Control									
130	Disassemble	0.00							
130									
Packaging	Memo	0.00							
Packaging	Package as per PPPD350-607-541								
140	QC21- Final Inspection - Work Order Release	0.00							
140									
QC	Memo	0.00							
Quality Control									

BAS
27
9-89
16/2/23BAS
27
9-89
16/2/23

16/2/24

SH 16/2/24

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval		
Description Work Order Deviation				Disposition					

Root Cause				FAULT CATEGORY			
Environment ☐	☐	No Re-verification	☐	Pressure/Forced	☐	Temperature/Cure	☐
Design ☐	☐	Operator	☐	Bending	☐	Set-up	☐
Doc/Data ☐	☐	Offset/Setup	☐	Centre Not Concentric	☐	BOM/Route	☐
Equip/Tooling ☐	☐	Supplier	☐	Cracks	☐	Broken/Damage/Defect	☐
Handling/Pre ☐	☐	Training	☐	Crimp/Kink/Ripple/Wave	☐	Inspection Incomplete/Unqualified	☐
Material ☐	☐	Use for Testing	☐	Cuffs	☐	Contamination	☐
Internal Transport ☐	☐	Poor Information	☐	Crushing	☐	Countersink	☐
Tribal Knowledge ☐	☐	Rushing	☐	Heat Treat	☐	Cut Too Short	☐
LOA ☐	☐	Product Improvement	☐	Wave/Twist in Tube	☐	Instructions Incomplete/Unclear	☐
Substation ☐	☐	Process Improvement	☐	Marks/Chatter	☐	Drill Holes	☐
Past Expiry Date ☐	☐	Manufacturing Process	☐	OTHER : _____			
Misidentified ☐	☐	Past Due	☐				

Picklist Print

January 13, 2016 3:21:03 PM

Page 1

Work Order ID: 140688

140688

Parent Item: D350-607-541

D350-607-541

Parent Item Name: Quick Release Heli-Utility-Basket™ Long, HD Lid, Spacepod™/Squirrel Cheek Comp.

Start Date: 1/13/2016

Required Date: 2/10/2016

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP REV:A 10-08-19 AS PER REV.A DD VERF BY:EC IPP Rev:B
11.02.09 add to install label DD verf by:EC IPP REV:C 12.03.06
AS PER ECN12-535 DD VERF:EC IPP REV:D 12.07.24 AS PER
ECN 12-610 DD VERF:EC IPP REV:E 13.08.21 CHG005 / ECN 13-
624 DD VERF:JLM IPP REV:F 14.06.09 AS PER ECN14-572 DD
VERF:JLM

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D4086-200		Manufactured	No			110	Each	10.0000	1	1			DAS 6 9-89
D4086-200									**				DAS 28 9-89
Placard, Max Load													

DAS
27
9-89

Location	Loc Qty	Loc Code
ST078	10	
138527	4	
139663	6	

D4917-300		Manufactured	No			110	Each	13.0000	1	1			DAS 6 9-89
D4917-300									**				DAS 28 9-89
Placard, Max Load													

DAS
27
9-89

Location	Loc Qty	Loc Code
ST137	13	
137895	1	
138526	12	

D350-607-511		Manufactured	No			110	Each	1.0000	1	1			DAS 6 9-89
D350-607-511									**				DAS 28 9-89
Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH													

DAS
27
9-89

Location	Loc Qty	Loc Code
PK015A	1	
140467	1	

DAS
6
9-89
FEB 22 2016

141215

Picklist Print

January 13, 2016 3:21:03 PM

Page 3

Work Order ID: 140688

140688

Parent Item: D350-607-541

D350-607-541

Parent Item Name: Quick Release Heli-Utility-Basket™ Long, HD Lid, Spacepod™/Squirrel Cheek Comp.

Start Date: 1/13/2016

Required Date: 2/10/2016

D4151-043

Manufactured No

110 Each

6.0000

Start Qty: 1.00

Required Qty: 1.00

D4151-043

Basket Fwd Hardpoint Assembly, Upper

**

141714

DAS 6 9-89

DAS 28 9-89

Location

Loc Qty

Loc Code

ST088

6

137925

5

140225

1

D4150-041

Manufactured No

110 Each

3.0000

**

1

D4150-041

Attachment Arm Assembly

138296

DAS 6 9-89

DAS 28 9-89

Location

Loc Qty

Loc Code

ST087

3

139545

3

AN4-13A

Purchased No

110 Each

144.0000

**

6

AN4-13A

Bolt

133998

DAS 6 9-89

DAS 28 9-89

Location

Loc Qty

Loc Code

FG

20

122808

20

ST344

124

m133769

124

AN4C15

Purchased No

110 Each

31.0000

**

1

AN4C15

Bolt

DAS 6 9-89

DAS 28 9-89

Location

Loc Qty

Loc Code

over003

20

M133694

20

ST343

11

M133483

11

FEB 22 2016

Picklist Print

January 13, 2016 3:21:03 PM

Page 4

Work Order ID: 140688

140688

Parent Item: D350-607-541

D350-607-541

Parent Item Name: Quick Release Heli-Utility-Basket™ Long, HD Lid, Spacepod™/Squirrel Cheek Comp.

Start Date: 1/13/2016

Required Date: 2/10/2016

AN310C4

Purchased No

110 Each

Start Qty: 1.00
51.0000 1

Required Qty: 1.00

AN310C4

Nut

**

DAS

28

9-89

DAS

6

9-89

Location

Loc Qty

Loc Code

ST331

51

M132344

3

M133483

28

M133694

20

MS17984-C413

Purchased No

110 Each

48.0000

1

MS17984-C413

Quick Release Pin

**

DAS

28

DAS 9-89

DAS

6

Location

Loc Qty

Loc Code

over005

40

m133577

10

m133686

20

m133932

10

ST315

8

m133483

8

MS21042L4

Purchased No

110 Each

2,566.000

6

MS21042L4

Locknut

**

DAS

28

9-89

DAS

6

9-89

Location

Loc Qty

Loc Code

FP001

41

m133363

41

GA

26

m127813

26

ST303

2402

m133769

2402

ST305

97

m130922

97

FEB 22 2016

Picklist Print

January 13, 2016 3:21:03 PM

Page 5

Work Order ID: 140688

140688

Parent Item: D350-607-541

D350-607-541

Parent Item Name: Quick Release Heli-Utility-Basket™ Long, HD Lid, Spacepod™/Squirrel Cheek Comp.

Start Date: 1/13/2016

Required Date: 2/10/2016

MS24665-151

Purchased

No

110

Each

138.0000

Start Qty: 1.00

Required Qty: 1.00

MS24665-151

Cotter Pin

**

DAS

28

9-89

Location

Loc Qty

Loc Code

DAS

6

9-89

GA

64

m128401

64

ST289

74

m133769

74

NAS1515H4L

Purchased

No

110

Each

271.0000

**

DAS

6

9-89

DAS

28

9-89

Location

Loc Qty

Loc Code

FG

22

103691

2

m132189

20

ST266

249

m132767

49

m133483

200

NAS1149F0432P

Purchased

No

110

Each

805.0000

**

DAS

6

9-89

DAS

28

9-89

Location

Loc Qty

Loc Code

ST260a

600

M133938

600

ST262

45

M133709

45

st268

160

M128995

35

M132677

125

BAS
27
9-89

FEB 22 2016

January 13, 2016 3:21:03 PM

Shop Packet Print

Page 5

Picklist Print

January 13, 2016 3:21:03 PM

Page 6

Work Order ID: 140688

140688

Parent Item: D350-607-541

D350-607-541

Parent Item Name: Quick Release Heli-Utility-Basket™ Long, HD Lid, Spacepod™/Squirrel Cheek Comp.

Start Date: 1/13/2016

Required Date: 2/10/2016

NAS1149C0463R

Purchased

No

110

Each

229.0000

Start Qty: 1.00

Required Qty: 1.00

NAS1149C0463R

Washer

**

BAS
27
9-89

Location

Loc Qty

Loc Code

FP001

72

m127306

72

ST271

157

m128401

57

m133077

100

DAS
28
9-89

3

FEB 22 2016

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-607-3 Rev.D,
INSTALLATION INSTRUCTIONS D350-607-4 Rev. C AND
INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-607 REV. 6

REF TCCA STC: SH94-14
REF FAA STC: SR00213NY
REF EASA STC: EASA.10016996
REF BRAZILIAN STC: 2007S03-03/-04/-05/-06

1.0 PURPOSE

This service instruction provides parts and instructions to facilitate installation of forward Basket Strut for customers that have purchased: D350-607-501 Conversion Kit @ CHG 004, D350-607-511 Quick Release Basket Mounting Kit @ CHG 004, D350-607-541 @ CHG 006, D350-607-543 @ CHG 007, D350-607-545 @ CHG 006, D350-607-547 @ CHG 007 Heli-Utility-Baskets as well as the D350-607-431 Strut Retrofit Kit and the D350-607-641 Long Cargo Tube @ CHG 001.

2.0 PARTS LIST:

Modify the quantities for D3910-5 and add D3910-7 as follows:

20160113 5A 140688

QTY -541	QTY -543	QTY -545	QTY -547	QTY -511	QTY -501	PART NUMBER	DESCRIPTION
X						D350-607-541	HELI-UTILITY-BASKET @ CHG 007 OR LATER
	X					D350-607-543	HELI-UTILITY-BASKET @ CHG 008 OR LATER
		X				D350-607-545	HELI-UTILITY-BASKET @ CHG 007 OR LATER
			X			D350-607-547	HELI-UTILITY-BASKET @ CHG 005 OR LATER
1	1	1	1	X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
					X	D350-607-501	CONVERSION KIT @ CHG 005 OR LATER
				1	1	D3910-5	X-TUBE LUG
				1	1	D3910-7	X-TUBE LUG

(ADD)

QTY -413	QTY -415	QTY -417	QTY -419	QTY -431	PART NUMBER	DESCRIPTION
X					D350-607-413	HEAVY DUTY LID KIT (LONG)
	X				D350-607-415	HEAVY DUTY LID KIT (SHORT)
		X			D350-607-417	LIGHTWEIGHT LID KIT (LONG)
			X		D350-607-419	LIGHTWEIGHT LID KIT (SHORT)
				X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
				1	D3910-5	X-TUBE LUG
				1	D3910-7	X-TUBE LUG

(ADD)

QTY -641	QTY -611	QTY -511	QTY -431	PART NUMBER	DESCRIPTION
X				D350-607-641	QUICK RELEASE LONG CARGO TUBE
1	X			D350-607-611	LONG CARGO TUBE
1		X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
			X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
		1	1	D3910-5	X-TUBE LUG
		1	1	D3910-7	X-TUBE LUG

(ADD)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

A	NEW ISSUE	AJS	14.05.16
REV.	DESCRIPTION	BY	DATE
DESIGN	AJS	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	N/A	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9699	SHEET 1 OF 2
APPROVED		TITLE	SCALE
DE APPR.		LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD			

3.0 PROCEDURE:

Install the D350-607-501 Conversion Kit, D350-607-511 Quick Release Mounting Kit or D350-607-431 Strut retrofit kit per Installation Instructions D350-607-3 Rev. D or D350-607-4 Rev. C. While installing the Forward Strut perform the following:

- 3.1 Substitute the Forward Lower D3910-5 X-Tube Lug with the D3910-7 X-Tube Lug as shown in Figure 1.
- 3.2 Install the forward D4775-041 Strut Assembly. Transfer mark from the upper hole on the clevis of the D4775-041 Strut Assembly to the D3910-7 X-tube Lug and drill thru the lug $\varnothing 0.257$ - $\varnothing 0.261$ as shown in Figure 1. Touch up chemical conversion coating per MIL-DTL-5541. Check the witness holes located at the bottom end of the D4775-041 Strut Assemblies to ensure that the thread from the rod end extends past the witness hole.
Torque MS21042L4/-4 nuts to 50-70 in-lbs (5.7-7.9 N-m). Torque MS21042L6/-6 nuts to 160-190 in-lbs (18.1-21.5 N-m).
- 3.3 Complete the installation in accordance with Installation Instructions D350-607-3 Rev. D or D350-607-4 Rev. C.

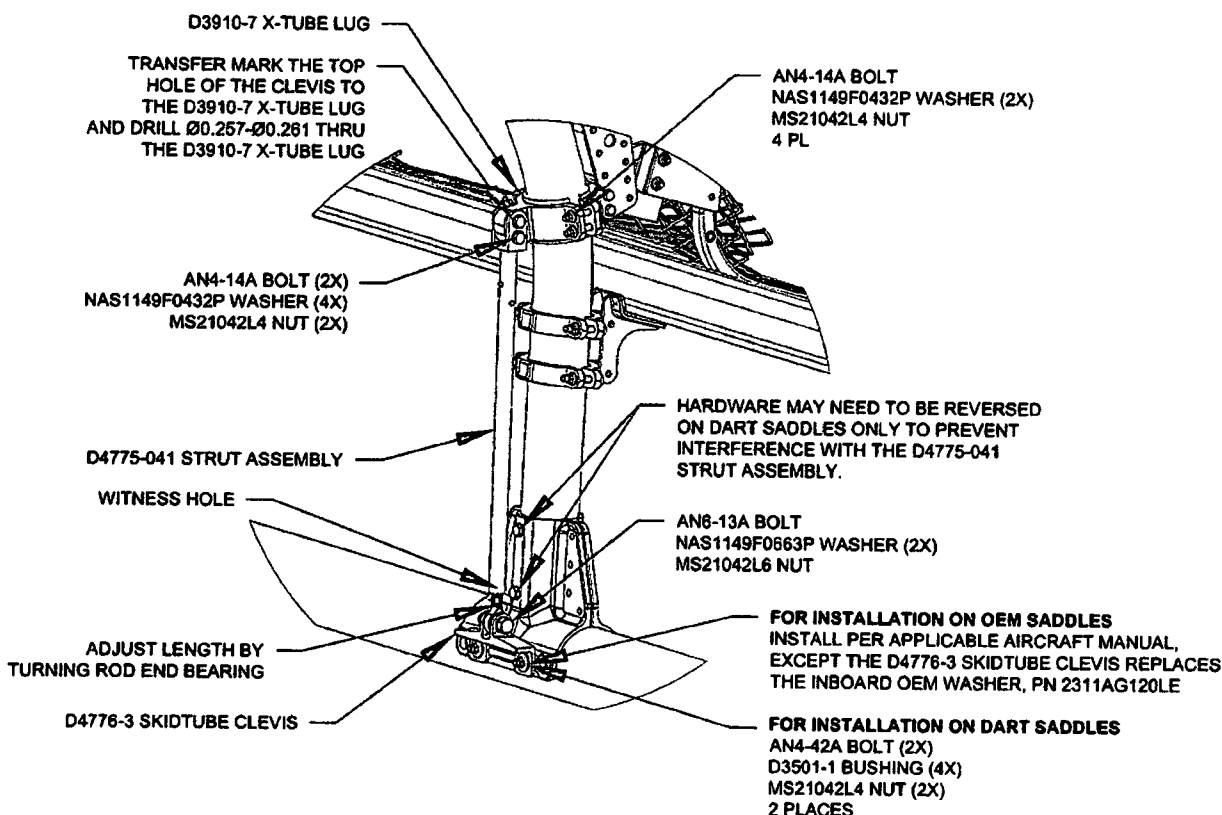


FIGURE 1: INSTALLATION OF D4775-041 FWD STRUT

4.0 WEIGHT AND BALANCE:

There is no weight and balance change associated with this update.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

DESIGN	AJS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9699	SHEET 2 OF 2
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	